


The machine wiping and pasting film

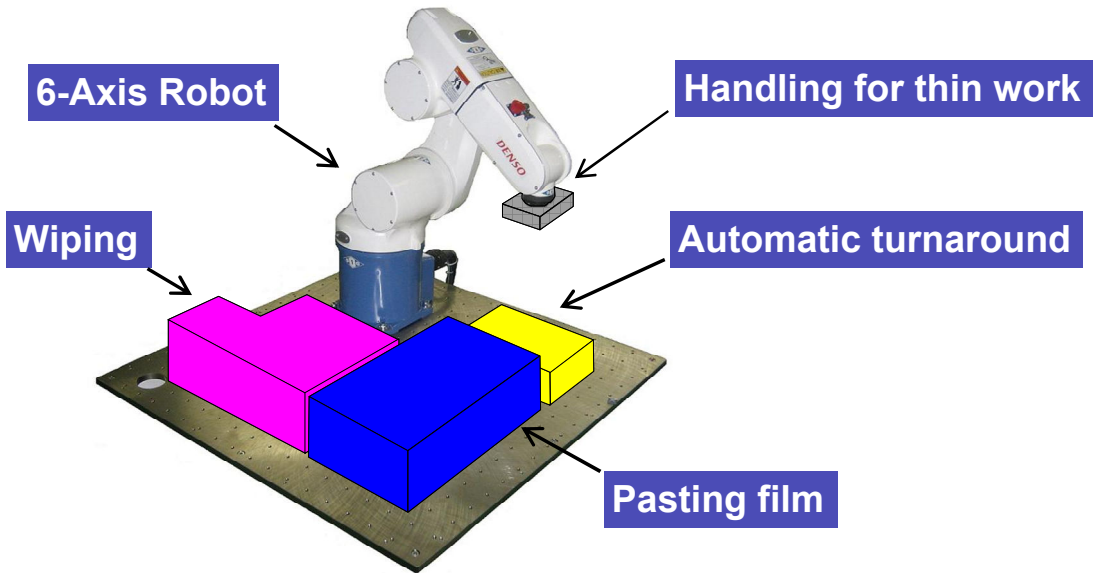

Feature of machine

The machine is miniaturized by flexible motion of robot. This machine can process at each unit while holding work by the robot equips handling for thin work.


Peripheral unit

■ Handling

Even if work size changes, it does a constant hold by torque control.

Handling equip gripper for thin work

Work-width	'A'	45~100[mm]
Work-thickness	'B'	0.6~3[mm]

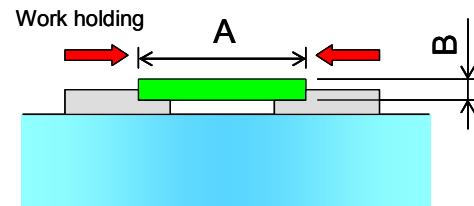


■ Wiping

A wasted quantity consumed reduce by automatic feeder of roll wiping-cloth. It is effective for the surface dirt removal by alcohol spreading mechanism.

■ Pasting film

Tape using reduce in removing protection sheet. Running cost reduction.

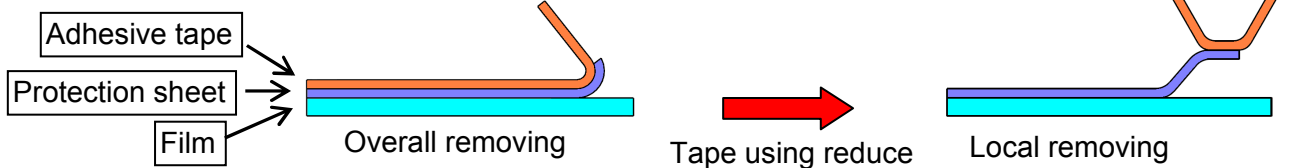

■ Automatic turnaround

The robot accesses each unit on both sides of work by getting the work that turned over again.

Option

■ Film magazine changer

Utilization rates improve by exchanging magazines automatically.

■ Clean room compliant

It is possible to select each unit to the level of the clean room.

■ Position detecting system by camera

The robot does accurate positioning by reading the information from a camera.

■ Development of new-unit

The machine realizes automation by developing a necessary unit.