

# Robotic Hand Changer

## SWR0010

An ideal compact tool changer for COBOTTA. Achieves zero backlash during attachment, that is

- Highly accurate (reproduces 0.005 mm positional precision)
- Highly rigid (resistant to bending and twisting), and with a
- Long service life (durability at over 1 million cycles)




Scan here  
for product  
information  
details




### Features

- Light and compact
- Long service life together with high rigidity
- Prevents runout and chatter with zero backlash at the attachment section
- Prevents brief downtimes due to transmission errors in the electrodes
- Highly accurate reproduction at 0.005 mm positional precision

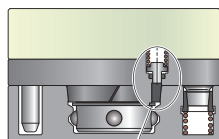


Close contact

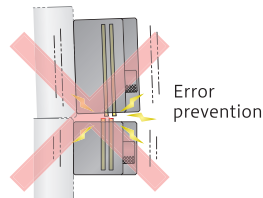


Error prevention

- Self-lock function prevents tool from falling

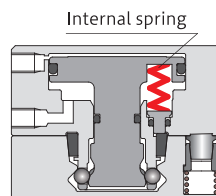


Internal spring

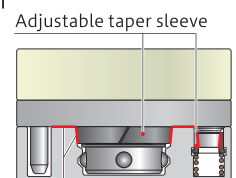

Adjustable taper sleeve

Restrained on two planes

- Protects the positioning part with the lifting function (dispensing function)

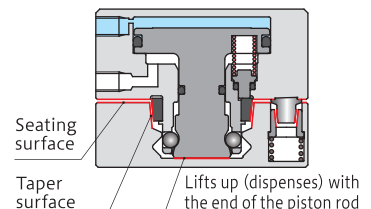

**KOSMEK LTD.**

Website

<http://www.kosmek.com/>

Contact us

[kosmek@kosmek.co.jp](mailto:kosmek@kosmek.co.jp)

